

Bantam-4M Quick Guide





Default IP, Username and Password

- Default IP address: 192.168.1.13 or 192.168.0.13 (vary with firmware version)
- Default username: admin
- Default password: 123456

The default password is used for your first login. To ensure account security, please change the password after your first login. You are recommended to set a strong password (no less than eight characters).

Appearance

Dimensions

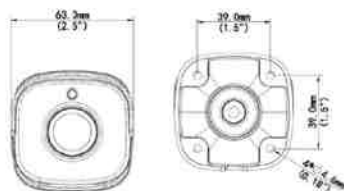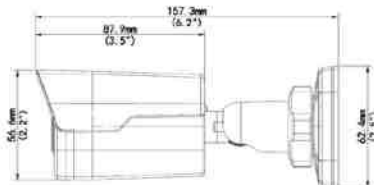

Mount Your Camera

Wall Mount

You can adopt wall mount or ceiling mount and purchase hardware accessories by yourself. The following part takes wall mount as an example. Ceiling mount is similar to wall mount and therefore is omitted here.

1. Locate the positions of the holes.

- 1 Paste installation positioning stickers on the wall and align the cross center to the hole in the wall.



- 2 Lead the cables across the hole on the wall.

2. Drill holes on the wall.

 
- 1 Use a Ø6-6.5mm drill bit.




- 2 Drill 30 mm-depth guide holes according to the positions marked by stickers.

3. Mount the plastic rivets of self-tapping screws.
4. Screw the locknut to loosen the universal joint before attaching your camera to the wall.

Knock the plastic rivets into the guide holes and ensure that they are tightened up.




5. Mount your camera onto the wall and connect all cables.

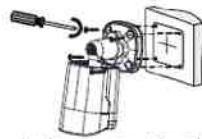

Lead tapping screws through the guide holes in the base and fix them on the wall by using a screwdriver.




6. Adjust the monitoring direction.

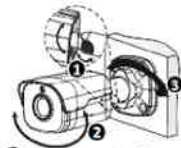

- 1 Adjust the opening of the universal joints as required.
- 2 Rotate the spherical hinge of the camera to get the desired monitoring direction.
- 3 Tighten the locknut.

7. Power on your camera and adjust images.

Cable Connection

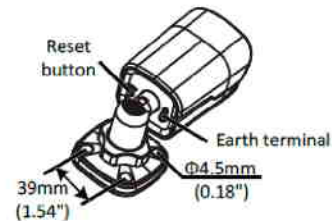

Access Your Camera

 
Before you begin, check that:

- Your camera is operating properly and connected to the network.
- The PC you are using is installed with Internet Explorer 7.0 or later.

Follow these steps to access your camera through the Web interface:

1. Open your browser, input the IP address of your camera in the address bar and then press **Enter** to open the login page.
2. Enter the username and password and then click **Login**.


Waterproof Components for an RJ45 Plug



Attach the seal ring to the Ethernet interface. Mount the waterproof components in order. Then insert the cable into the Ethernet interface and screw the waterproof bolt in.

Waterproof Tail Cable

 Connect the tail cables and then take the following steps to protect the tail cables from water using waterproof tapes. The figures are for your reference only.



1. Connect the tail cables, and protect the cables and cable connections using insulating tapes. Then wrap all the tail cables together using insulating tapes.



2. Choose a start point for waterproof tapes and protect the tail cables using waterproof tapes.

You can crimp the inner wires of the cable with the RJ45 plug first and then cover the waterproof components. You may also cover the waterproof components first.

Coax Seal Recommended

Packing List

- Bullet w/ Pigtail for IP and secondary 12V DC power input
- Extra waterproof connector
- Adhesive Template
- Hardware Baggy - 4 screws and drywall anchors
- Quick Guide
- Coax Seal

Part # - EC-IRB4-4M
3 year warranty

ENVIRO
cams

866-264-0041
sales@envirocams.com

201 N. Elm St.
Kemp, TX 75143

Not Your Father's IP Cameras